



HANDLE-IT™
M I I E Q U I P M E N T

Hand-Crank Operated Post Lift Table Assembly and Operation Instructions

Warning: Maximum weight capacity of this table is 2000 lbs. Do not exceed.

1. Attach the Handle (#22) to either end of the Main Shaft (#3) or the Slow Speed Shaft (#2).
2. Crank the Handle to insure that the chain/sprocket mechanism is working properly.
3. With the Handle on the Main Shaft, up and down movement of the table will occur faster. With the Handle on the Slow Speed Shaft, table movement will be slower.
4. If the Handle is used on either shaft on the same side as the Floor Lock (#8), turn handle clockwise to raise the table, counterclockwise to lower. If the Handle is used on the side opposite of the Floor Lock, turn the handle counterclockwise to raise the table, clockwise to lower it.
5. Always activate the Floor Lock before loading or unloading the table. To activate the Floor Lock, step down on the Floor Lock foot pedal. Once the Floor Lock is activated, test the table to be sure the table is locked in place. The Floor Lock is released by pulling up on the Floor Lock foot pedal.
6. Once the load is lifted to the desired height, remove the Handle and store it in a safe place.
7. Periodically oil the chains and sprockets with good quality chain oil.

Part Number Listing

Part #	Description	Qty	Part #	Description	Qty
1	Collar	1	13	Taber Gear	1
2	Slow Speed Shaft	1	14	Gear Assembly	1
3	Main Shaft	1	15	Bracket	1
4	Sprocket	1	16	Chain	1
5	Chain	1	17	Screw Shaft	4
6	Sprocket	1	18	Bearing	4
7	Swivel Wheel	2	19	Sprocket	4
8	Floor Lock	1	20	Spacer	4
9	Down Table	1	21	Rigid Wheel	4
10	Top Table	1	22	Handle	1
11	Table	1	23	Grip	1
12	Spacer	1			

